




Part Number:
KXA00044

Models:
BSVI Hunter
With Vin No ME3J3D5FEN1


 **WARNING:** Royal Enfield genuine accessories are designed to fit only the specific Royal Enfield motorcycle(s) that are specified above. They should not be fitted to any other type of motorcycle. Pay particular attention to the warnings and cautions contained in this instruction, failure to do so may result in an incorrect installation of the accessory which could result in an unsafe riding condition and possible accident. If in any doubt always seek help from your authorised Royal Enfield dealer.

 **WARNING:** Before starting any accessory kit installation ensure the motorcycle is supported in a stable condition. Failure to support the motorcycle correctly could lead to motorcycle damage or personal injury.

 **WARNING:** All fixings must be tightened to the torque values specified in this instruction. Failure to tighten fixings to the correct torque could result in an unsafe riding condition and possible accident


 **CAUTION:** Care should be taken when fitting any accessory kit. Incorrect handling of kit components or the use of incorrect tools could lead to component or motorcycle damage.

NOTE: The content of this instruction is subject to change at any time without notice or liability. Royal Enfield reserves the right to revise the information presented at any time.

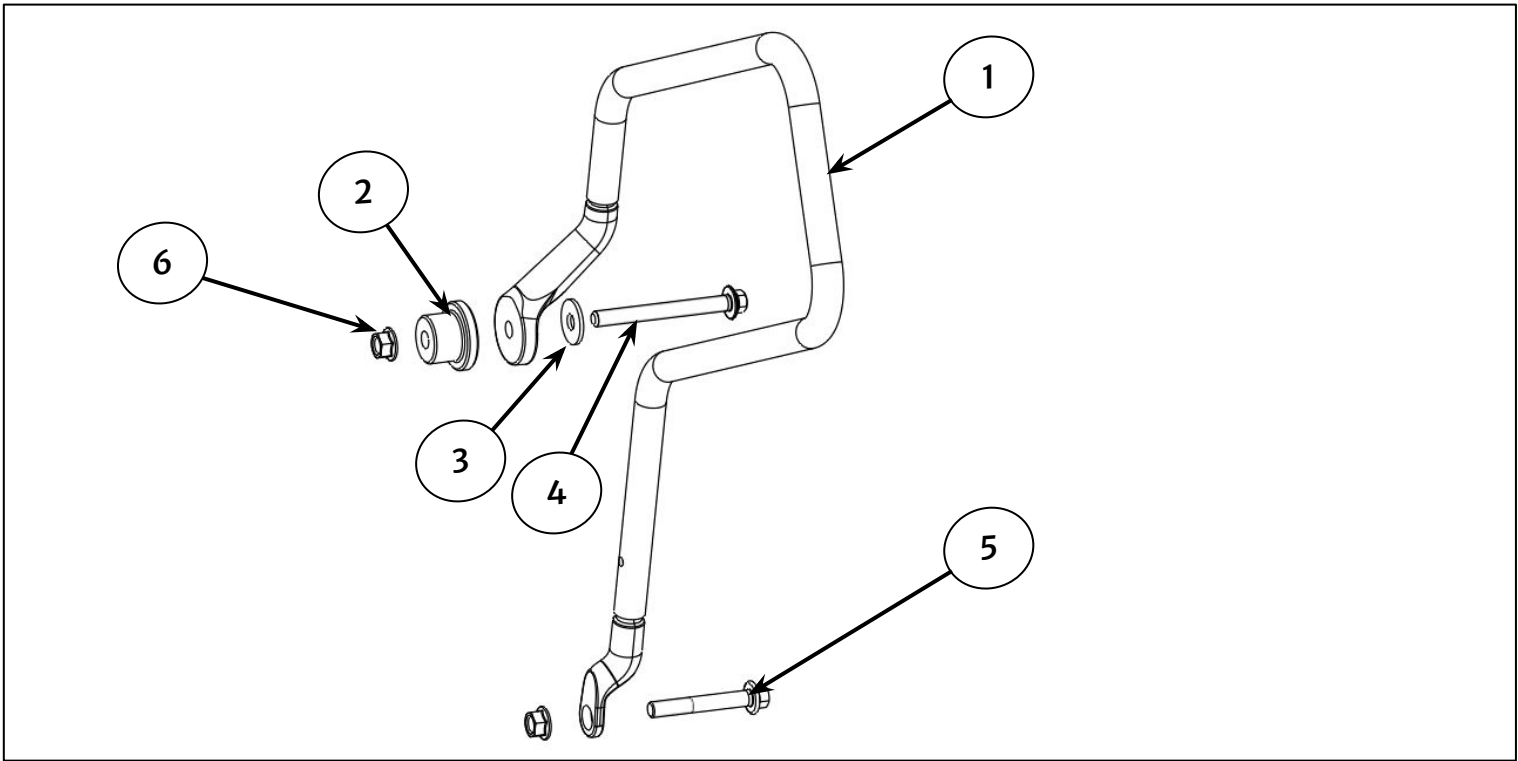


Item	Description	Qty
1	Pannier rail, right hand.	1
2	Spacer boss	1
3	Washer	1
4	Fixing , M8 x 75mm	1
5	Fixing , M8 x 55mm	1
6	Nuts, M8	2


1 Carefully remove rear mudguard frame cap (1) from the right hand side of the motorcycle. Retain for reuse when the accessory pannier rail is removed.

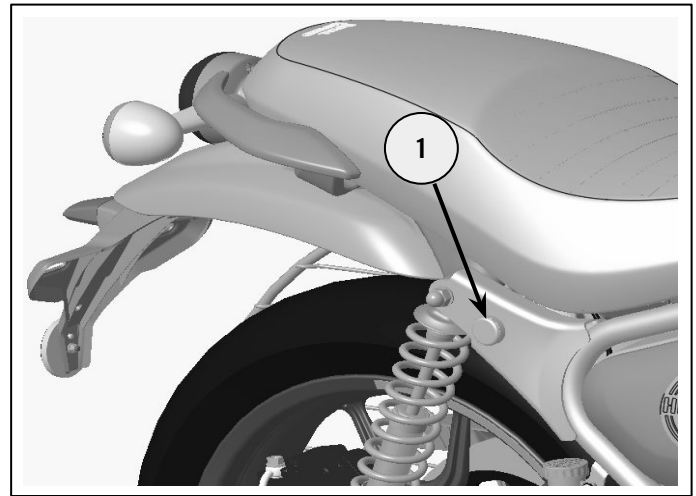


2 Fit the spacer boss (1) from the kit into the recess (2) in the motorcycle frame.

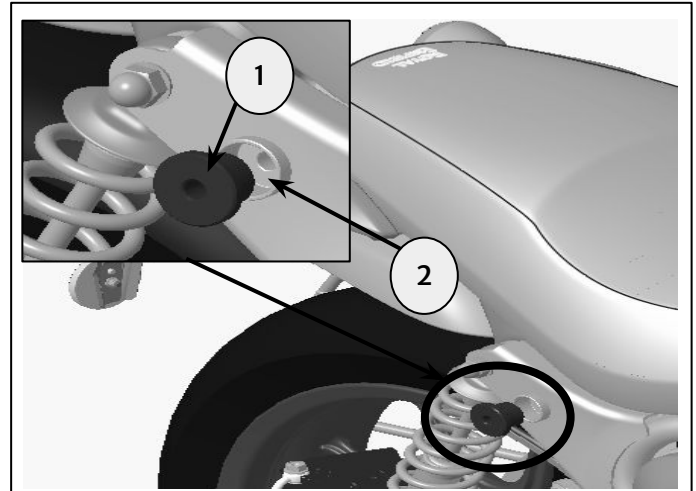

3 Align the pannier rail top mount (1) to the spacer boss (2). Insert M8 x 75mm fixing (3) and washer (4) from the kit. Secure it using M8 nut (5) from the kit from inside as shown. Do not fully tighten the fixing at this stage.

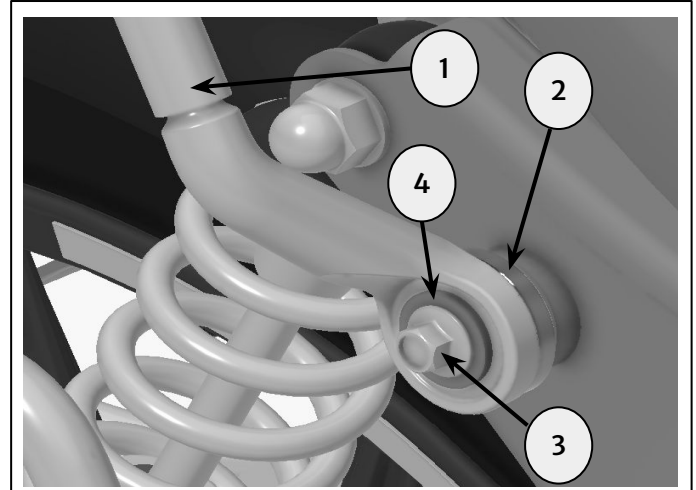


	13mm socket and ratchet.
--	--------------------------

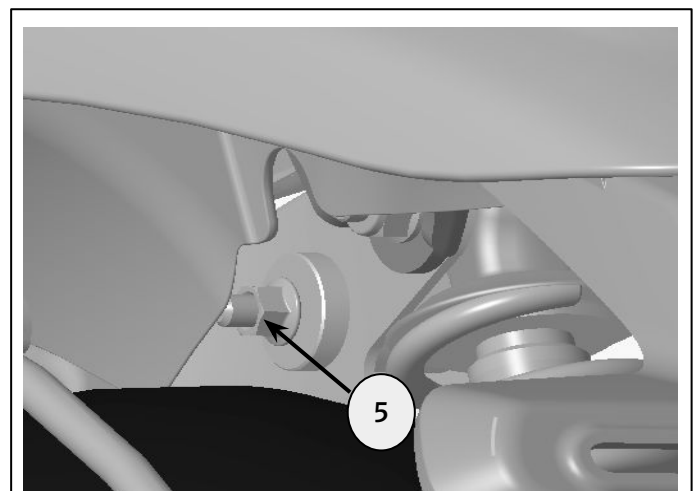

4 Remove and discard fixing(1) and nut (2) from heel guard mount.




13mm socket and ratchet.

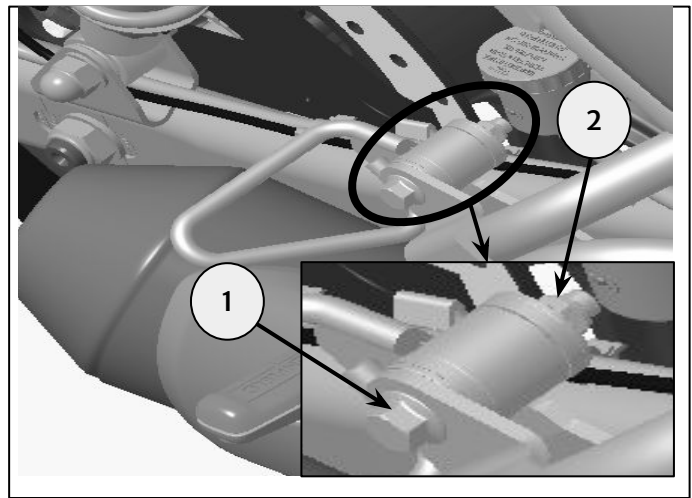

5 Align the pannier rail lower mounting (1) to the bracket (2) on the motorcycle frame. Use M8 x 55mm fixing (3) and M8 nut (4) from the kit as shown, Tighten to 25 Nm.




13mm socket with torque wrench.

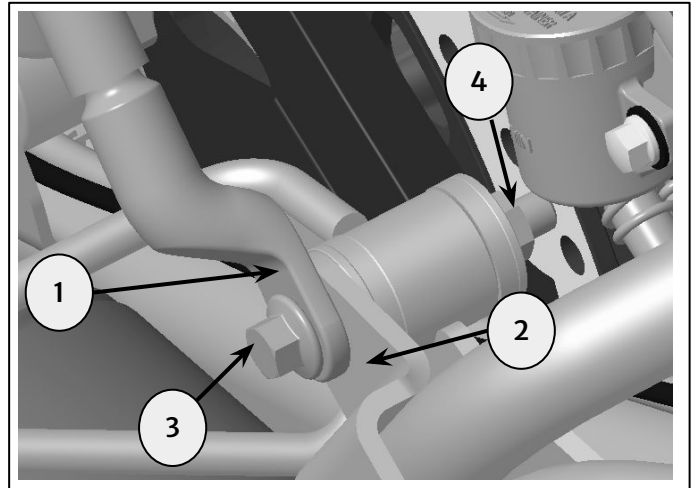

6 Tighten the pannier rail top side mounted fixings to 25Nm.



13mm socket with torque wrench.

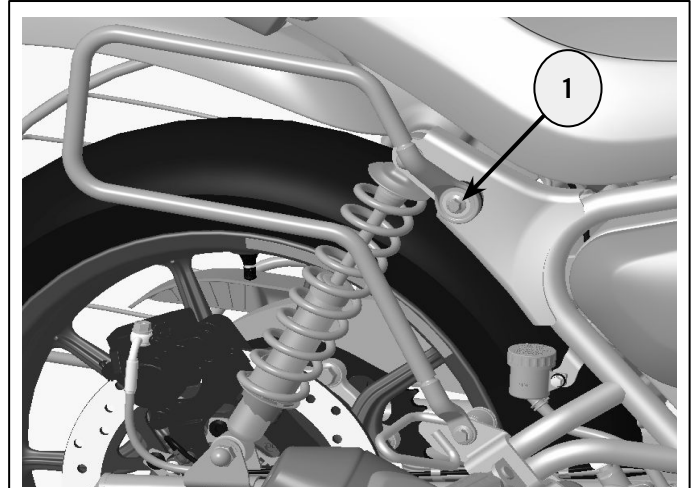

WARNING: Maximum speed to be reduced to 95 KPH (59 MPH) while the side box (KXA00076) is fitted.



WARNING: Never overload the panniers, the maximum safe load for pannier is 3 Kg (6.6 lbs). Incorrect loading of the panniers could cause the motorcycle to become unstable and result in an accident.



WARNING: The fitment of panniers to the motorcycle will affect the stability and handling of the motorcycle. Failure to observe the changes in motorcycle stability and handling characteristics could result in an accident.



WARNING: After fitting any genuine Royal Enfield accessory always ride the motorcycle with caution and allow time to become familiar with any change in the motorcycle handling characteristics. Failure to become familiar with any change in the motorcycle handling characteristics may cause the motorcycle to become unstable and result in an accident.