

Part Number:

KXA00065, KXA00066, KXA00067,
KXA00068, KXA00073, KXA00074

Models:

Meteor 350cc MY20 Onwards



WARNING: Royal Enfield genuine accessories are designed to fit only the specific Royal Enfield motorcycle(s) that are specified above. They should not be fitted to any other type of motorcycle. Pay particular attention to the warnings and cautions contained in this instruction, failure to do so may result in an incorrect installation of the accessory which could result in an unsafe riding condition and possible accident. If in any doubt always seek help from your authorised Royal Enfield dealer.



WARNING: Before starting any accessory kit installation ensure the motorcycle is supported in a stable condition. Failure to support the motorcycle correctly could lead to motorcycle damage or personal injury.



WARNING: All fixings must be tightened to the torque values specified in this instruction. Failure to tighten fixings to the correct torque could result in an unsafe riding condition and possible accident.



CAUTION: Care should be taken when fitting any accessory kit. Incorrect handling of kit components or the use of incorrect tools could lead to component or motorcycle damage.

NOTE: The content of this instruction is subject to change at any time without notice or liability. Royal Enfield reserves the right to revise the information presented at any time.

KXA00065, KXA00066



Item	Description	Instruction steps to follow
KXA00065	LOW RIDE SEAT, BLACK	All steps to be followed
KXA00066	LOW RIDE SEAT, BROWN	All steps to be followed

KXA00067, KXA00068



Item	Description	Instruction steps to follow
KXA00067	TOURING SEAT, PASSENGER, BLACK	Skip steps 3-6
KXA00068	TOURING SEAT, PASSENGER, BROWN	Skip steps 3-6

KXA00073, KXA00074




Item	Description	Instruction steps to follow
KXA00073	TOURING SEAT, RIDER, BLACK	All steps to be followed
KXA00074	TOURING SEAT, RIDER, BROWN	All steps to be followed


1 Remove 1x CAP Head Bolt (1) from the front grab rail mounting and repeat on the other side. Retain fasteners for future use.



6mm hex bit with ratchet

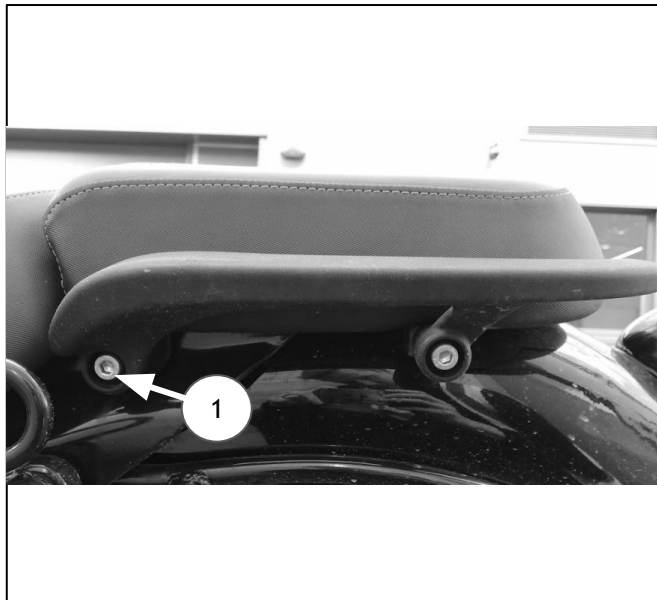


2 Lift the front of the passenger seat and unhook from the frame. Remove top hat inserts (2) from left and right hand side. Retain for future use.

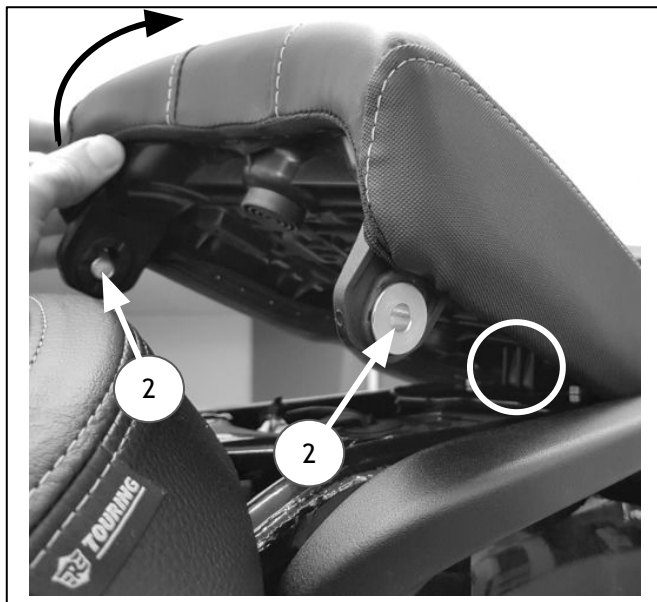


3 Remove the 2x Hex Flange Head Bolt (3) and 2x Sleeve (4) from the rear of the rider's seat and retain for refitting the seat




10mm hex socket with ratchet

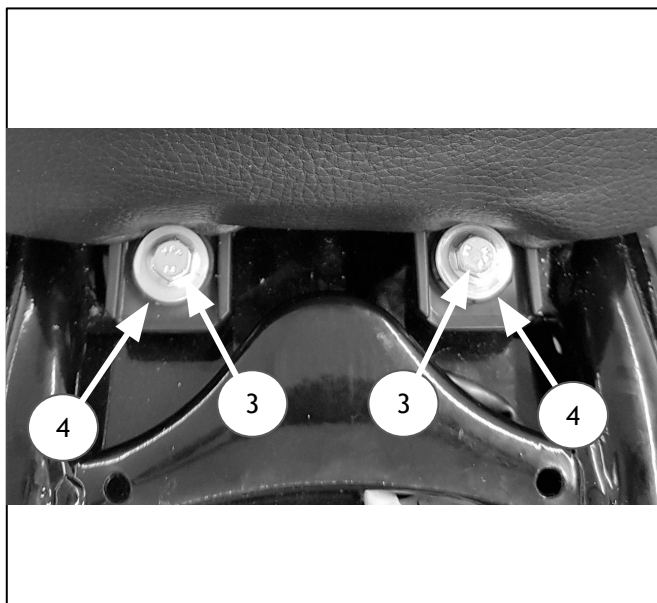


4 Lift the rider's seat from the rear and pull rearwards to unhook.

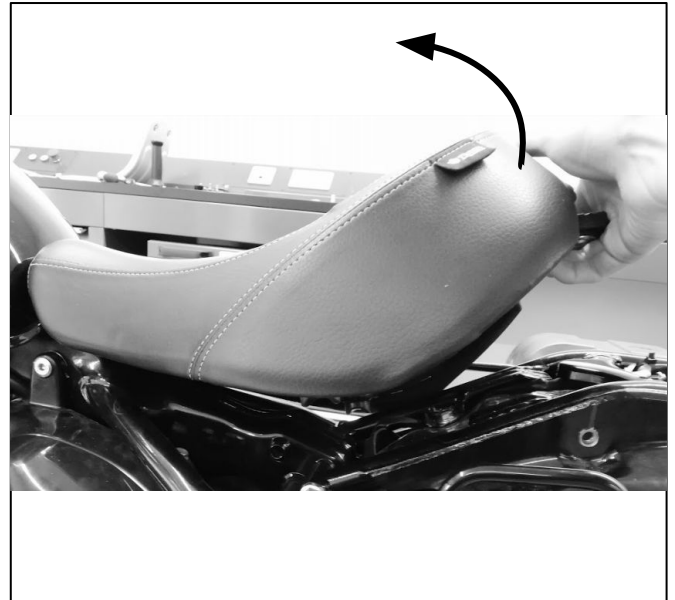


5 Push the front of the new accessory rider's seat on to the fuel tank tab and align rear mount point to the frame. Refit 2x top hat inserts (4)

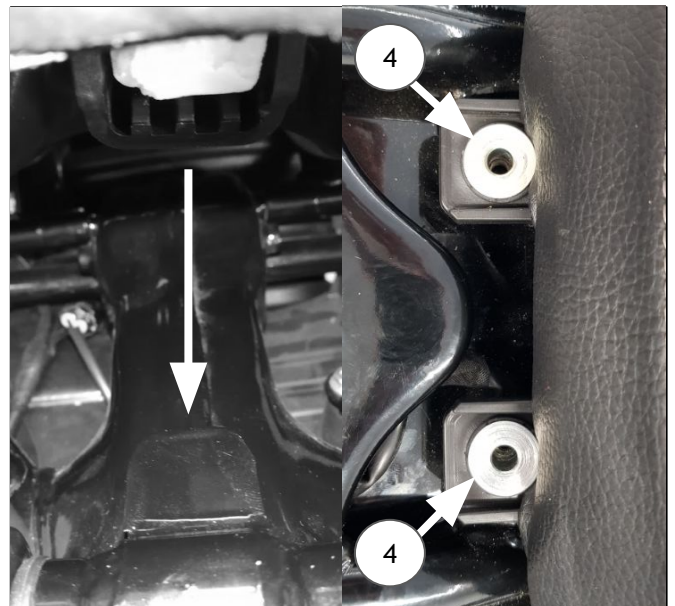


6 Insert the 2x Hex Flange Head Bolts (3) that were removed earlier and torque to 12NM

	10mm hex socket with ratchet
--	------------------------------

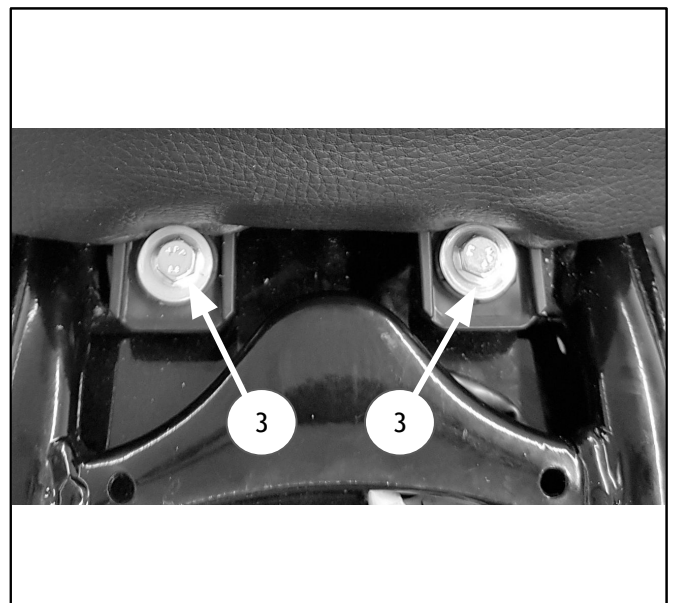

7 Refit 2x top hat inserts (2) into grommets in the passenger Seat.

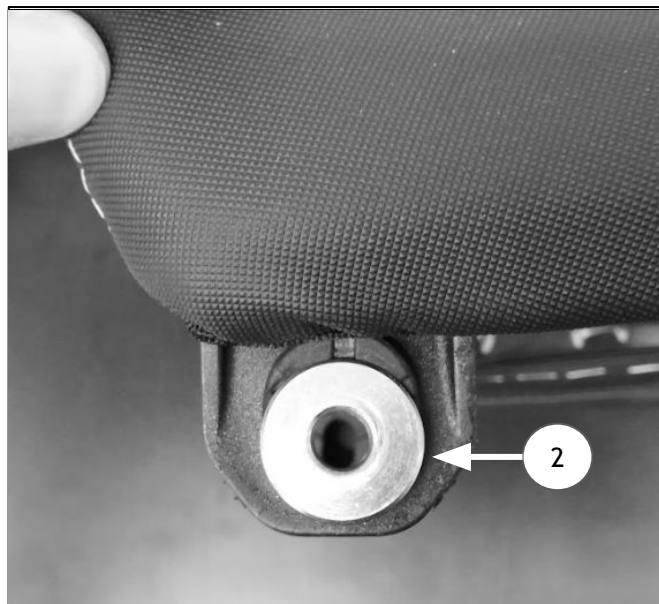


8 Re-insert the rear passenger seat hook into the frame and align the front mounting holes.



9 Reattach passenger seat by reusing the CAP head Bolt (1) removed earlier. Insert through the grab rail boss and into the frame. Torque these to 25NM and repeat on the other side.



6mm hex bit with ratchet

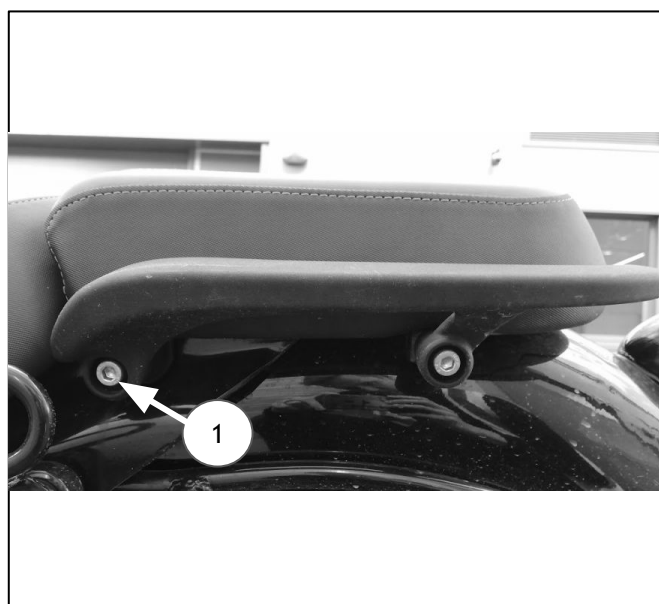

WARNING: After fitting any genuine Royal Enfield accessory always ride the motorcycle with caution and allow time to become familiar with any change in the motorcycle handling characteristics. Failure to become familiar with any change in the motorcycle handling characteristics may cause the motorcycle to become unstable and result in an accident.